



PORTABLE RECHARGEABLE BLUETOOTH SPEAKER

USER'S GUIDE MRM

SAFETY INFORMATION

WARNING - LISTENING AT HIGH VOLUME FOR A LONG TIME MAY DAMAGE YOUR HEARING

THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO INFORM THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.



SAFETY INSTRUCTIONS - PLEASE READ BEFORE USE

- Never disassemble or attempt to modify the product in any way.
- Do not attempt to submerge the product in water or expose it moisture, water or liquids of any kind.
- Do not drop the product or place the product on its curved side in a location above ground where it may roll and fall.
- Do not cover or restrict ventilation and use only in areas of adequate ventilation with at least 15cm of separation.
- Avoid hot and/or humid environments such as bathrooms, conservatories, cars or in direct sunlight.
- Do not place or install the product near to sources of heat such as radiators or stoves.
- Do not expose the product directly to naked flames, hot surfaces or other apparatus that produce heat.
- The safe operating temperature range of this product is +5°C to +40°C.
- Do not expose the product to objects or forces which may pierce or damage the enclosure.
- For charging, this product requires 0.8A (800mA) at 5V DC. Check USB port power supply specifications before use.
- CAUTION: AC-DC USB power supplies may carry electric shock hazard. Read power supply safety information before use.
- Do not short circuit or connect loads in excess of 0.5A (500mA) to the power cable USB socket (marked “out”) while the cable is connected to the product.
- Do not daisy chain or connect multiple power cables to any single USB socket or USB power supply.
- Do not connect any other load or device to the power cable USB socket (marked “out”) while the power cable USB plug (marked “in”) is connected to a USB port power supply.
- Do not stress, bend, pinch or force cables in such a way as to incur damage.
- Do not store the product with a low/flat battery or leave the unit unused for a long period of time.
- Do not leave the product permanently on charge.
- Do not use this product near medical devices or on an airplane.
- Refer all servicing and repair to original manufacturer. Servicing is required when the product is damaged in any way such as power-supply cord is damaged, liquid has been spilled or objects have fallen onto the unit, the unit has been exposed to rain or moisture, does not operate normally or has been dropped.

BATTERY

This product contains a non-serviceable rechargeable lithium ion battery. DO NOT attempt to open or disassemble the unit to replace or remove the battery yourself. Please refer to original manufacturer for battery servicing and replacement. Follow safety instructions above carefully. If fluid should leak from the unit or rechargeable battery, do not touch. If fluid comes in contact with eyes, wash thoroughly with water and seek medical advice. Do not rub eyes. If you suspect that the battery is faulty through unexpected behaviour such as not holding charge, please turn off and do not attempt to charge or use the product. Contact the original product manufacturer immediately.

ENVIRONMENTAL

All packaging materials are recyclable, please dispose of in accordance with your local recycling regulations. The product may contain batteries and harmful substances so should not be treated as household waste. Where possible we will repair any faulty units to keep the product operational for as long as possible. If you wish to dispose of the product, please contact the original manufacturer to return it for recycling or for advice on suitable recycling methods.



REGULATORY COMPLIANCE STATEMENTS

This product contains a 2.4Ghz radio transmitter and should be used in such a manner that human contact is minimised during normal product operation.

US (FCC)

FCC ID: 2AD65MRM

MODEL NUMBER: MRM

This equipment complies with FCC radiation exposure limits set forth for portable use conditions.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. No changes shall be made to the equipment without the manufacturer's permission as this may void the user's authority to operate the equipment.

CANADA (ISED)

IC: 12731A-MRM

MODEL NUMBER: MRM

This equipment complies with the safety requirements for RF exposure in accordance with RSS-102, issue 5, Annex VII for portable use conditions. This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux exigences de sécurité concernant l'exposition aux RF selon la norme RSS-102, 5ème édition, pour des conditions d'utilisation portable. Cet appareil numérique de la classe B est conforme à la norme ICES-003 du Canada.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

EU (CE)

Hereby, Pasce Ltd. declares that the radio equipment Minirig is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.minirigs.co.uk/compliance

OTHER INFORMATION

WARRANTY INFORMATION
SUPPORT/CONTACT INFORMATION
MANUFACTURER

WWW.MINIRIGS.CO.UK/TERMS-AND-CONDITIONS
WWW.MINIRIGS.CO.UK/SUPPORT
MINIRIGS LTD, UNIT 4 CITY BUSINESS PARK, BS50SP



minirig
© PASCE LTD 2017

INDEX

[press link to skip to page](#)

 
A WORD FROM US

First of all we want to offer you a big thank you from everyone here at Minirigs for purchasing a Minirig Mini (MRM) Bluetooth speaker. We have spent years developing this product, making a truly portable speaker without compromising sound. We hope you get years of enjoyment out of it. Don't forget our app unlocks extra features and includes Minirig mixes from international DJs of all genres streamed directly to your phone, from our Soundcloud page. Download the app today for free, from the Google and Apple app stores


UNPACKING

Before you begin, open up the box and check the contents. You should have:



1. MINIRIG MINI SPEAKER

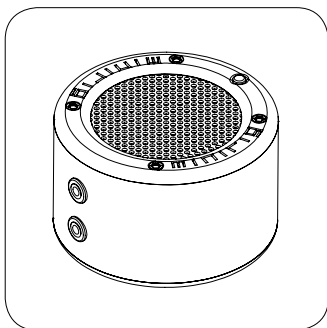

 2. AUX AUDIO CABLE 3.5MM

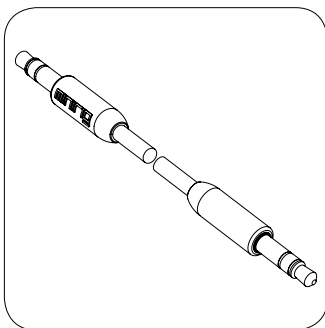

  3. USB POWER

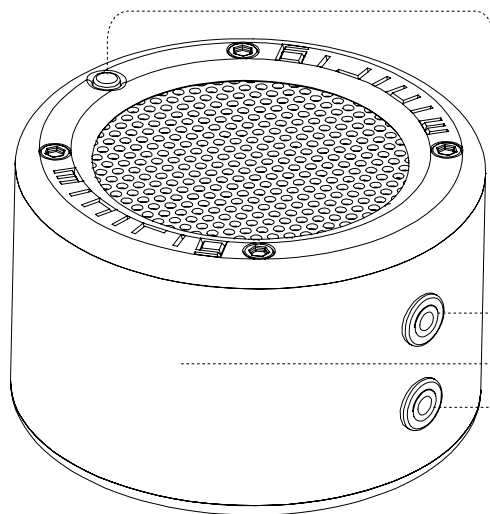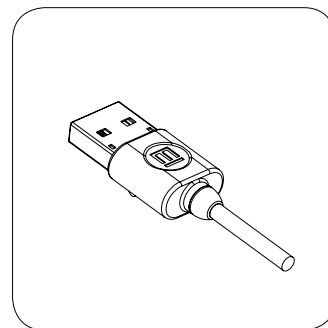

GETTING TO KNOW YOUR MINIRIG MINI

- BUTTON / STATUS LED** Lights up to show status. Multifunction button to operate the MRM
- AUX SOCKET (HIGH GAIN)** Audio input from audio player or output to another MRM or Subwoofer
- POWER SOCKET** Plug supplied, insert power cable in here to charge the MRM (opposite side)
- AUX SOCKET (LOW GAIN)** Audio input from audio player or output to another MRM or Subwoofer

TURN ON/OFF

Press and hold the button for 2 seconds to turn the MRM **on**, you will see the LED turn green and hear a tone momentarily. Finally the LED will settle showing your battery status.

Press and hold the button for 2 seconds to turn the MRM **off**, you will see the LED turn red and hear a tone momentarily.

For more information regarding the battery status see:

 
'CHARGING' or **PRESS HERE**

CONNECT TO BLUETOOTH


Please remove any audio cables before turning your MRM on.

To connect your audio device with the MRM, they have to be "paired" first.

The MRM will always be available for pairing as long as it is **on**, in Bluetooth mode, and doesn't have two devices already connected to it. There is no pairing "mode" unlike other Bluetooth speakers, which makes pairing simpler and easier.

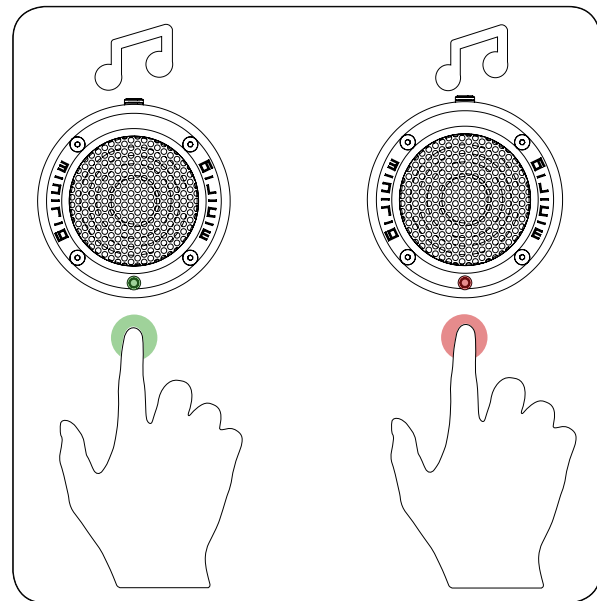


TURN ON BLUETOOTH

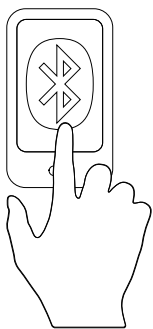 


Locate the Bluetooth settings on your device (E.g. smartphone). Turn Bluetooth ON and search for device.

 FIND YOUR MINIRIG MINI

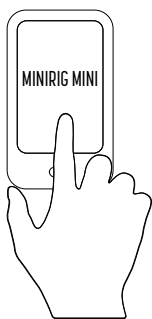


Find and select the "MINIRIG MINI". Your device will indicate that they are "pairing".

 PLAY SOME MUSIC

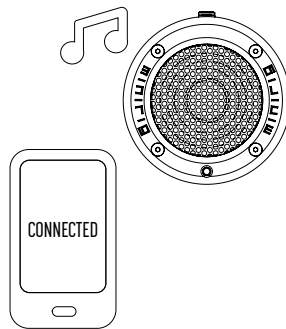


Your device will confirm when they have paired and you can begin playing music.

 SHARE WITH FRIENDS

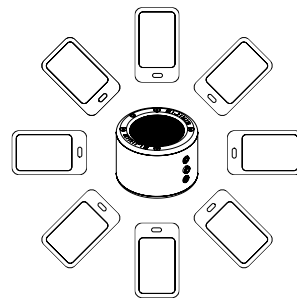


The MRM can remember up to 8 paired devices.

 CONNECT TWO DEVICES TO SHARE MUSIC

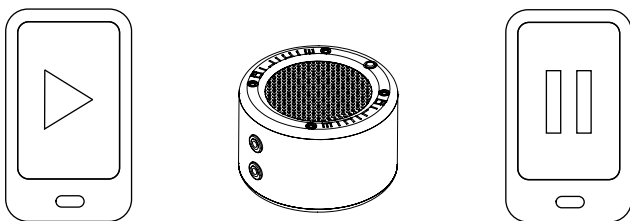


You can pair and connect two devices to a MRM at the same time. To switch between them you need to stop the music on the device playing, then start playing music on the second device.

 PLUG IN A SUBWOOFER WHEN USING BLUETOOTH

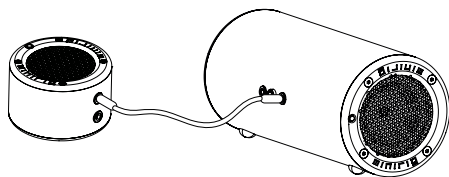

In Bluetooth mode, the MRM will output audio from both AUX sockets. This allows you to connect to another Minirig, Minirig Subwoofer or Hi-Fi system.

 HIGH AND LOW GAIN SETTINGS

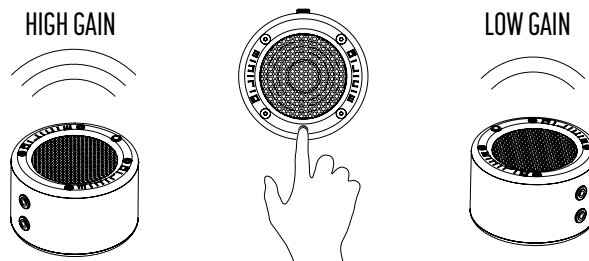

The MRM has two gain (volume) settings – LOW and HIGH. In Bluetooth mode it will always start in HIGH gain. In AUX mode it will start in LOW or HIGH gain depending on which AUX socket you plug in to.

 
TO CHANGE GAIN AT ANY TIME:

- Check that the Minirig is ON and audio is playing
- Press the button once, do not hold it down
- In high gain the LED will be brighter than in low gain

We recommend that you use LOW gain at normal listening levels for the best sound quality

CONNECT AUDIO CABLE (AUX MODE)

If your device does not have Bluetooth or you would like to use a wired connection instead, you can connect to the MRM using the supplied AUX cable. Ensure your MRM is off and remove any audio cables before using cable mode.

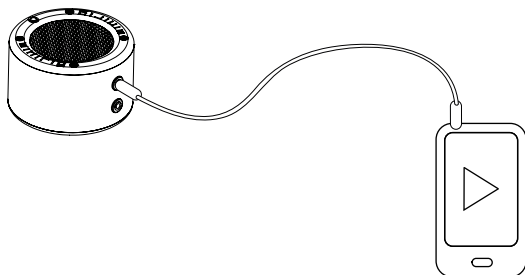


- Plug one end of the AUX cable into the headphone socket on your audio device.
- Plug the other end into one of the AUX sockets on the Minirig.

The MRM will turn on when you insert the cable displaying the green LED ●. There will be no tone. When you unplug the cable the Minirig will turn off displaying the red LED ● there will be no tone.


Please ensure the cable is pushed all the way in when turning on!

HIGH AND LOW GAIN IN WHEN USING A CABLE

 HIGH GAIN

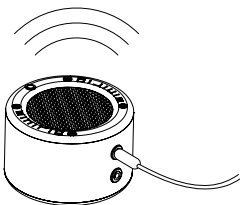

LOW GAIN

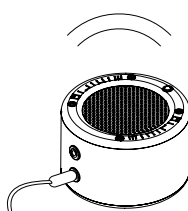 


The top socket will put the MRM in high gain, the bottom socket low gain. Push it in firmly to make the connection. You can still change gain using the button as in Bluetooth mode.

You can turn the MiniRig OFF and ON by pressing and holding the button. However, it will stay in AUX mode until you remove all the audio cables


In AUX mode, removing the audio cables will also turn the MRM OFF. Again there will be no tone in AUX mode.

You must do this before you can use the MRM in Bluetooth mode.

 
LINKING UP MRM (MONO)

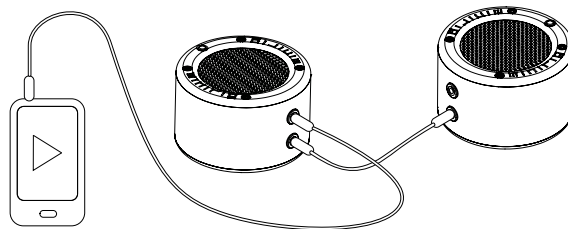

 
In AUX mode you can use the spare audio socket to link out to another MiniRig product as shown. Connected in this way, all speakers will play a mix of the left and right channels - mono. You can connect as many speakers as you like. Always ensure all speakers are set to either high or low gain.

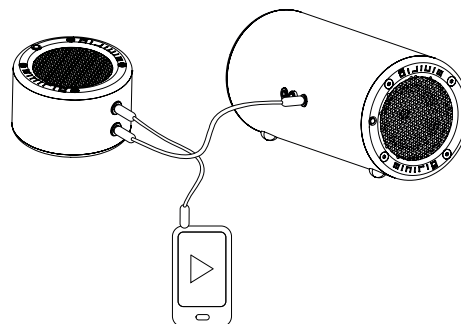

 LINKING-UP WITH MRM AND SUBWOOFER IN CABLE MODE (STEREO)

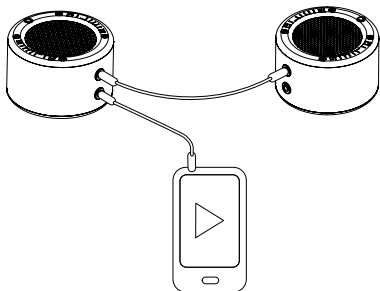

 Two MRMs can be configured to play in stereo using two standard 3.5mm aux cables. Connect the first MRM to your audio device, then link out to the second MRM as shown. To enable stereo mode, double press the button on BOTH speakers. They will now play LEFT and RIGHT as shown. You can also add a Subwoofer to the chain by placing it between the two MRM speakers.

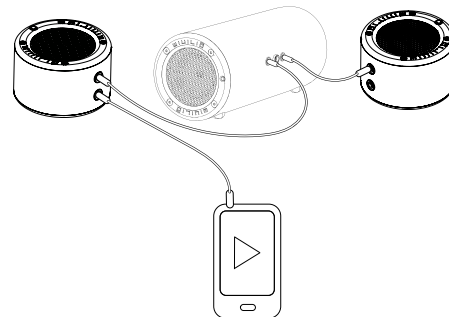

CHARGING

WHEN THE MINIRIG MINI IS ON, THE COLOUR OF THE LED WILL INDICATE THE BATTERY LEVEL.

GREEN: 75-100%

CYAN: 50-75%

 
BLUE: 25-50%

PURPLE: 5-25%


RED: 0%



When the MRM is OFF you can check the battery status by pressing the button once (do not press and hold). At any time you can charge the Minirig Mini using the supplied power cable.

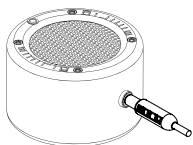

 Plug the round end into the Minirig Mini power socket. Ensure you push it in firmly to make the connection.

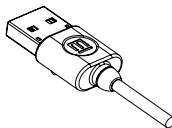

Next insert the USB plug end into any powered USB socket.

USB sockets can be found on most computers and mobile phone chargers.

 
 
WARNING: only one Minirig or Sub per USB plug

WHEN ON CHARGE, THE LED WILL FADE ON IN A REPEATING 2 SECOND CYCLE. THE COLOUR REPRESENTS THE BATTERY LEVEL.

A FULL CHARGE WILL TAKE 2-3 HOURS. ONCE THE BATTERY IS CHARGED, THE LED WILL STOP THIS REPEATING CYCLE.


BLUETOOTH RECEIVER MODE

Your MRM can be used as a Bluetooth receiver where it will output stereo audio via the 3.5mm jack. To enable this mode you need to connect your chosen device (e.g. headphones or Hifi) then press the MUTE button on the app to mute the speaker and enable stereo output.

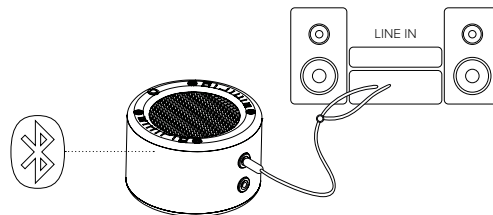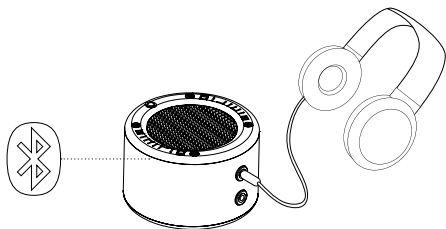


WIRELESS STEREO PAIRING

 Two MRM's can link up together using the wireless Bluetooth connection. This allows you to create an immersive stereo soundstage or to double up the sound in different areas without any cables.

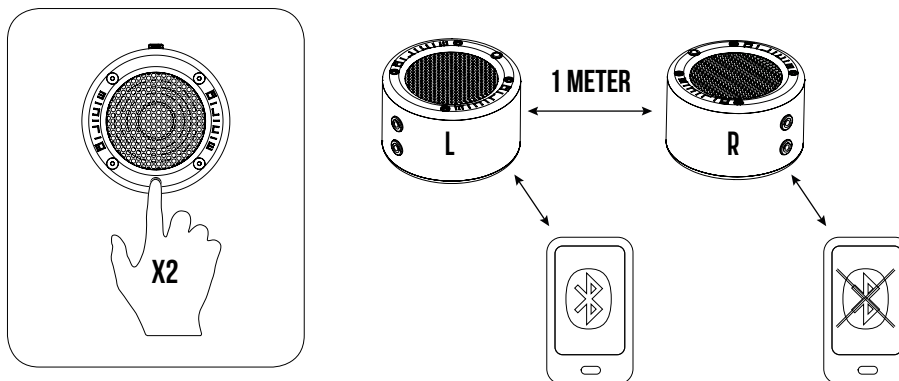

- Turn both MRM's ON in Bluetooth mode and place them around 1 meter or less apart – they only need to be close for this pairing process.
- Select which one you want to use as the LEFT (master) speaker. You may already be connected and playing music through this MRM.
- Press the button TWICE on the LEFT (master) MRM. Just press and release both times, don't hold the button. You will hear a "beep beep" tone.
- The MRM will start searching for other Minirigs in the area. The LED will flash white and red.
- At any time you can cancel the process by pressing the button.
- When it has found another MRM you will hear a confirmation tone and the LED will stop flashing.
- After a few seconds, audio will start playing back in stereo through the two speakers.
- If the pairing is unsuccessful or if the search times out, you will hear a different lower "failed" tone. Please try again or see FAQ for assistance.

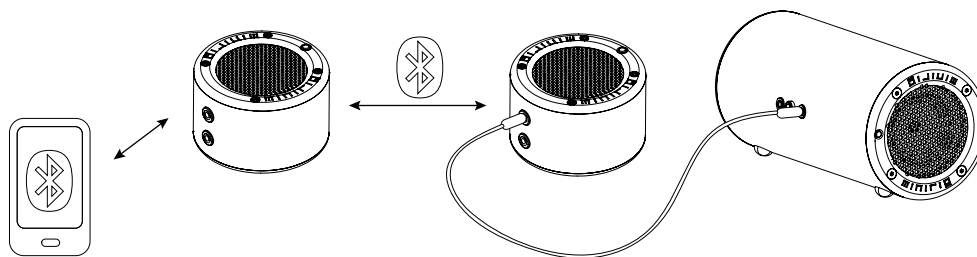 

- Connect a Minirig Subwoofer to either MRM if you have one. It will receive both LEFT and RIGHT signals. This can be re-configured using the MRM app. See demo videos for more information.
- When you turn one of the paired MRM OFF, they will both turn OFF. They will automatically un-pair and return back to normal.
- You can lock them together using the MRM app, so next time you turn them on, they reconnect automatically in wireless stereo. See app instructions for more details.
- At anytime you can also un-pair the Minirigs by pressing the button TWICE on either MRM. You will hear a tone to confirm they are un-paired.

POWER SAVING FEATURES

To save power, the amplifier circuit will automatically turn off while there is no music playing, even though the MRM remains ON. In this “standby” mode, a full battery can last up to 4 days in Bluetooth mode or in AUX mode. If you are listening to the MRM at low volumes in AUX mode, please use the low gain setting to ensure the MRM does not turn off unexpectedly. Alternatively, you can turn this mode OFF using the Minirig App.

The MRM will turn off after 30 minutes if no music has been playing. Again, you can disable this using the app.

 
Finally, the MRM also has a power saving mode which reduces bass and the maximum volumes to roughly double the battery life. It will automatically enter this mode when the battery drops below 10% to extend playback. You can enable/disable this mode at any time

TROUBLESHOOTING

We hope that you find the MRM easy and problem-free to use. However, if you are having any trouble here are a few things you can try which may help:

Pause/stop the music for 5 seconds and press play again. This can resolve some audio issues.

- Turn the MRM(s) OFF and ON again. This will re-establish the MRM connection.
- Try a different AUX audio cable or MRM power cable if you have one.
- Move the MRM closer to the Bluetooth audio device.
- Turn Bluetooth OFF and ON again on your Bluetooth audio device.

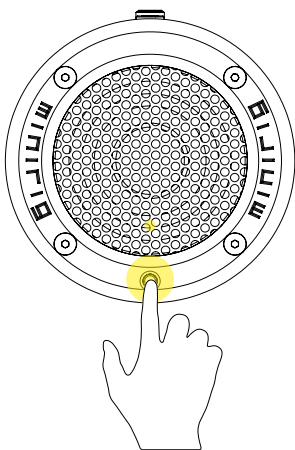

If you are still having trouble, try a full reset of the Minirig Mini – this will restore it to default and un-pair all devices.

- To reset your Minirig, start with the Minirig OFF and no cables plugged in.
- Press and hold the button. Keep holding it for at least 16 seconds.
- Eventually the Minirig will reset and the LED will turn off. You can release the button now.
- The LED should next illuminate GREEN then PURPLE then YELLOW.
- You will hear a loud bass tone as the speaker tests itself, then the LED will turn GREEN before turning off.
- It is now ready to use again as normal.
- You will have to pair your devices again after a reset. Delete/un-pair/forget them from your device before attempting to pair again.
- The Bluetooth name will be reset to - “Minirig Mini” and all settings returned to their default state.

If you are still having problem you can visit our support page. Please read our FAQ section and view our demo videos before contacting us.

WARRANTY AND REPAIRS

We hope that the Minirig Mini will never let you down, however if you believe that there is a fault with your Minirig we have a simple and fair warranty and repair service.

If you have been through our FAQ and troubleshooting section and still believe your Minirig is faulty, please contact us through our support page.

Where possible we prefer to repair any faulty products. Our products are made in the UK, so we are in the unique position of being able to fix and repair any of our products quickly ourselves. This also benefits the environment by re-using as many parts as possible, minimising any harmful or non-recyclable waste going to land-fill.

The Minirig Mini is covered by a full 1 year warranty service. Please see our terms and conditions for full details. If your Minirig product is faulty outside of this warranty period please still contact us as usual. We can still repair your product quickly and easily through our fair non-profit repair service.

FOLLOW US BY HITTING THE ICONS



HOME